 
 


INSTRUCTION

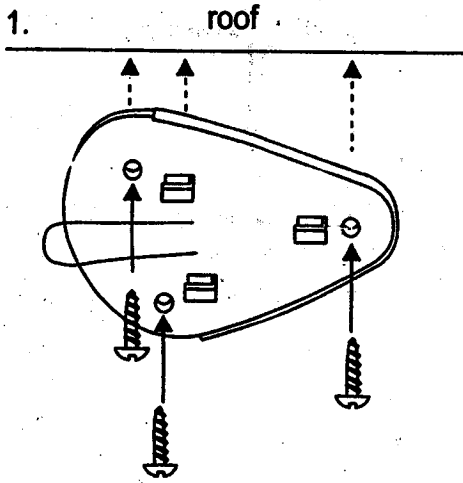 


1. Detach mounting plate from the main unit. Find a suitable place and attach the mounting plate to the roof as shown.

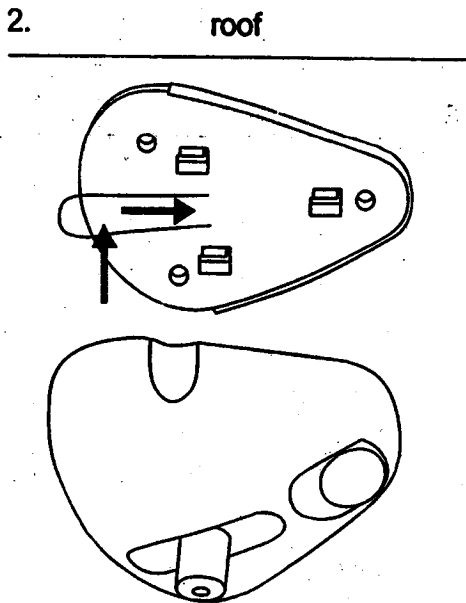

2. Slide the main unit into the mounting bracket as shown.

DANGER
Laser radiation Avoid direct eye exposure
LASER DIODE Avoid exposure, Laser radiation is emitted from the aperture.

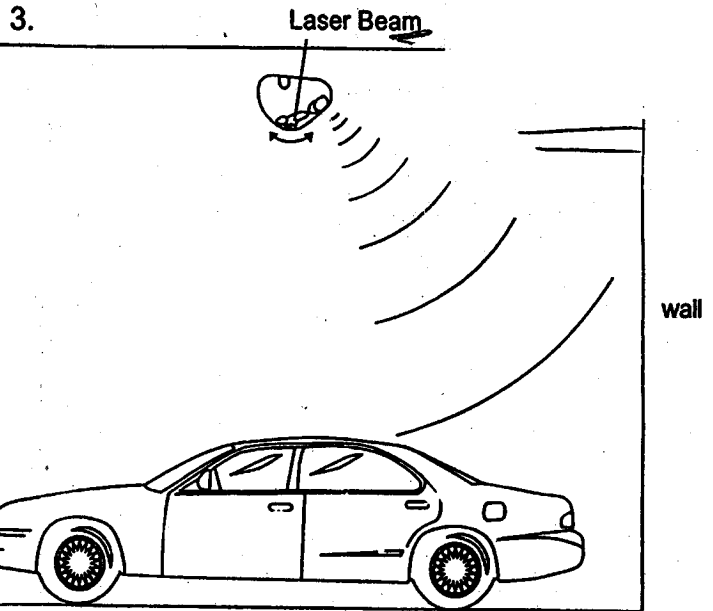

3. Park your car in the desired position. Adjust the laser beam as desired so that it shines on a prominent feature on the car. Good choices include a spot on your dashboard or the space between the hood and windshield. Remember, it must be a spot you can see from the driver's seat while parking the car.

4. When your car first enters the garage the motion detector will turn on the laser. Drive forward until the light beam hits your pre-determined spot indicating you are parked in the correct position.

Parts:

*Laser Parking unit with button	1 pc
9V adaptor	1 pc
Screw	3 pcs

Battery installation:

Unscrew the battery cover and insert one 9V battery (not included)

NOTE:

ALL BATTERIES USED MUST BE OF THE SAME TYPE.
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (CADMIUM) BATTERIES. DO NOT MIX OLD AND NEW BATTERIES

Recommend:

Suggest use 9V adaptor for best performance.
Battery is for back up only.

Made in China