

ADJUSTABLE PWM MODULE

CAT# PFM-1

Setting Parameters:

Four pushbuttons on module are used to set the frequency and duty cycle. Settings are saved when power goes down.

Frequency is divided into four ranges:

- 1Hz to 999Hz (no decimal point on display)
- 1KHz to 9.99KHz (decimal point in hundreds place X.XX)
- 10KHz to 99.9KHz (decimal point in tens place XX.X)
- 1KHz to 150KHz (decimal point in tens and hundreds place X.X.X)

Duty cycle: 0 to 100%

All parameter automatically saved during power-down.

