

CAT# PS-531 Switching Supply

There must be a load on one of the 5 volt taps before the supply will register voltage.

