



EN Instructions

1. Set blade distance

- Remove shaft **X** (use the back of the Allen key which is stored at the underside of the tool) and lift the top part.
- Remove shaft **Y** to release the blades.
- Reseat the blades in the desired position:
 - conductor blade: A or B
 - sleeve blade: C, D or E
 See table above for blade distances.
- Push shaft **Y** back in place.
- Place the top part back and push shaft **X** back in place.

2. Select wire type

- The orange block **Z** can be repositioned to match different cable types.
 - Slide the block **Z** sideward out of the top part.
 - Place the block **Z** back in such a way that the arrow points at the desired cable type.
- 6** = RG6 / **8** = RG58 (3C2V) / **9** = RG59, RG62
D = special cable types

3. Set cutting depth

- Turn the bolts at the bottom of the tool to set the height of the conductor and sleeve blade.