

INSTRUCTIONS TO DISMANTLE DCM-273 MIRROR MECHANISM

Photo A

With moderate manual pressure the white platform can be rocked forward and backwards, right and left. Position it so that one side of the platform is as low as it can go, with the other side is at its highest. You will be able to see where the platform connects to the motor assembly. Use a straight-blade screwdriver to break the plastic ring where it connects. Just twist the screwdriver until the plastic breaks and frees the platform.


Photo B


Remove the ball joints to free the platform.

Photo C

Remove screws and the metal clips, and the motors can be slipped from their slots in the bracket.

To remove white platform use
screwdriver to break plastic ring

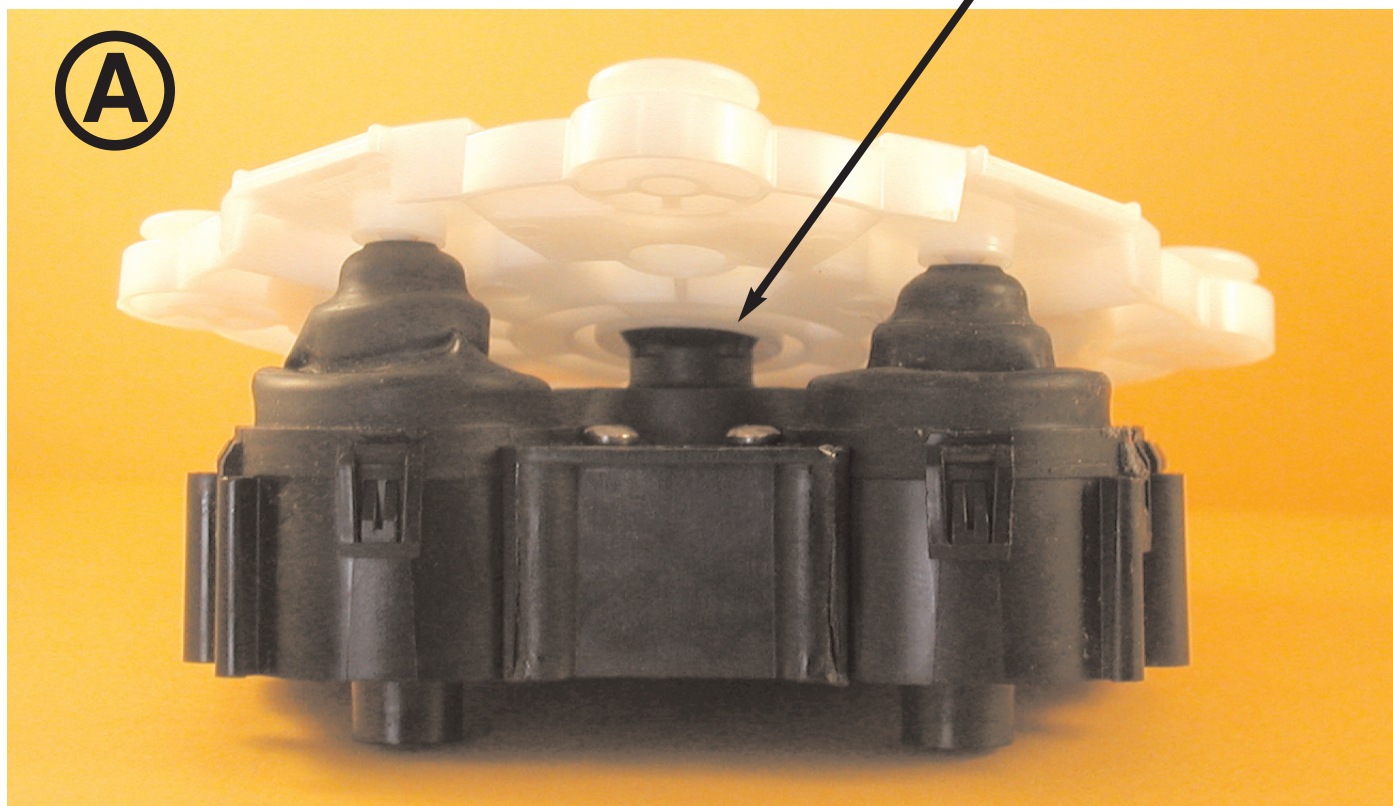

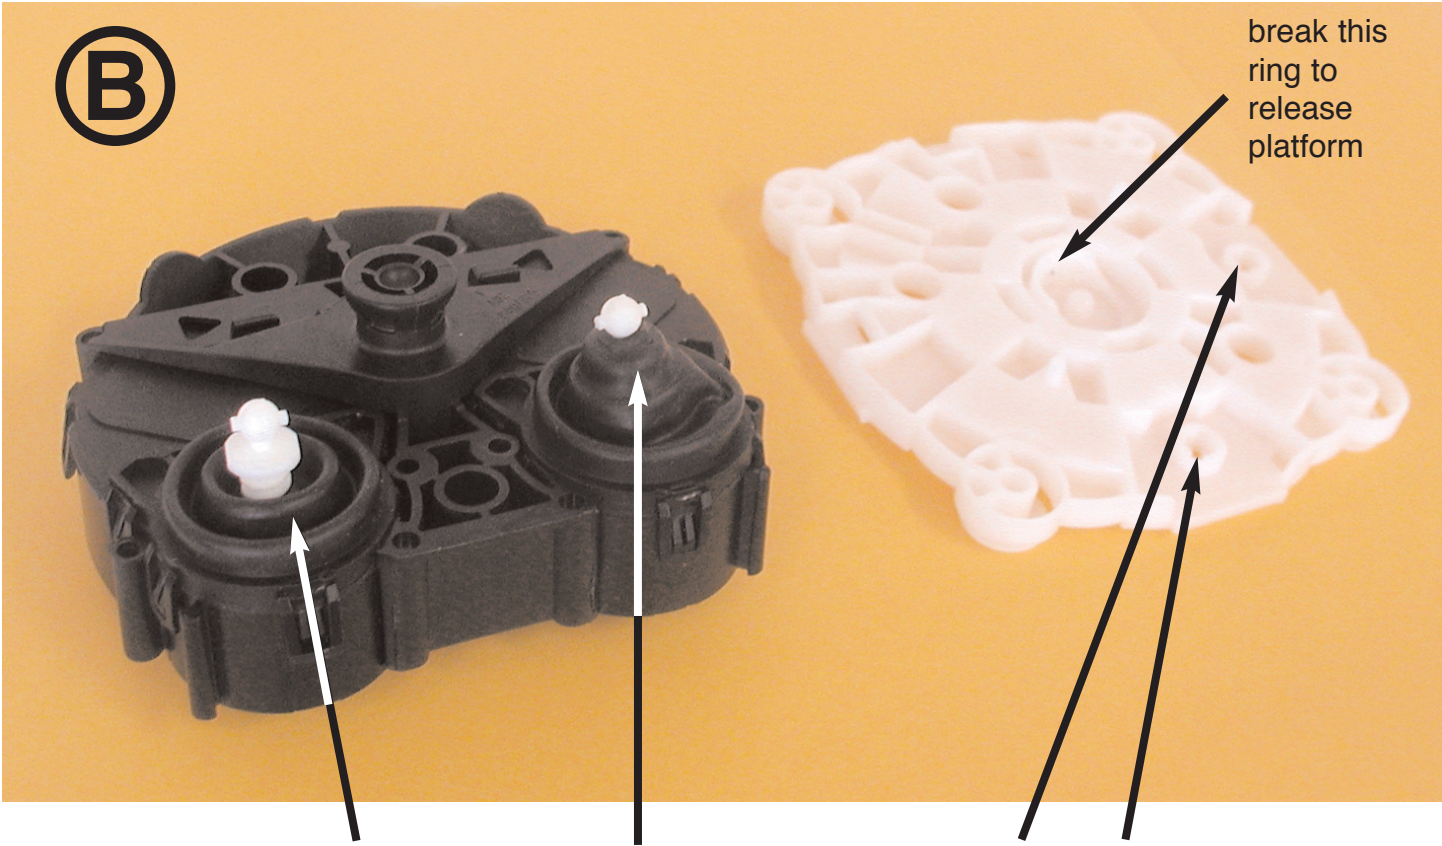

Keyed balljoints. Turn to remove from holes in platform.

